




## Receiver Sensitivity

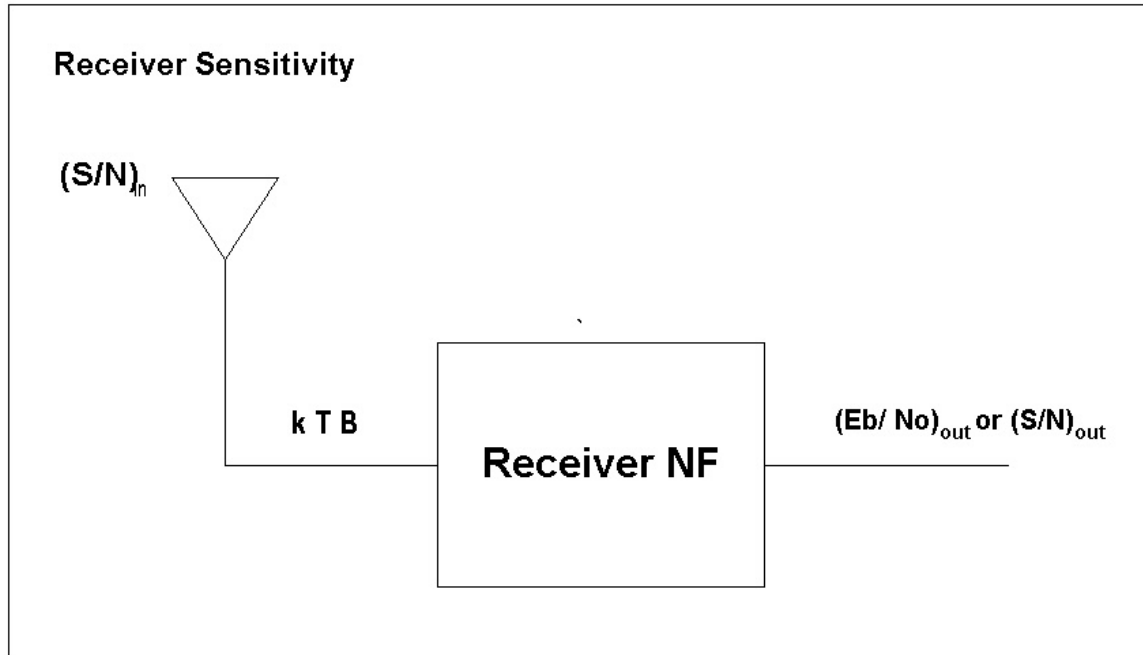

$$\begin{aligned}(S/N)_{in} &= (S/N)_{out} + NF \\ S_{in} - N_{in} &= (S/N)_{out} + NF \\ S_{in} &= N_{in} + (S/N)_{out} + NF \\ \text{where } N_{in} &= 10 * \log (k * T * B)\end{aligned}$$

$$\text{thus, } S_{in} = 10 * \log (k * T * B) + NF + (S/N)_{out}$$

where  $S_{in}$  is the receiver sensitivity

$N_{in}$  is the antenna noise that is transferred to the receiver

$k$  is the Boltzmann constant ( $1.38 \times 10^{-23} \text{ J/}^\circ\text{K}$ )

$T$  is the system operating temperature in  $^\circ\text{K}$ , typically  $290^\circ\text{K}$

$B$  is the system noise bandwidth in Hz

$NF$  is the noise figure

$(S/N)_{out}$  is the usable sensitivity of the analog receiver. In digital systems, the receiver performance is stated as  $E_b/N_o$ , the

Modulation Bit Energy ( $E_b$ ) divided by noise Spectral Density ( $N_o$ )

Total Noise input in dBm is given by

$$\text{Absolute Sensitivity (dBm)} = 10 * \log (k * T * B) + NF$$

$$\text{Absolute Sensitivity (dBm)} = 10 \log (k * T) + \log B + NF$$

$$\text{Absolute Sensitivity (dBm)} = -174 + \log B + N$$